

# **AP 720S™**

# **LCD Panel Guide**

---

**OPTIGEN®**  
Semi-Automated Instrument

# **HITACHI**

 Hitachi Chemical Diagnostics, Inc.

## **Confidentiality Notice**

The materials and information contained herein are provided by Hitachi Chemical Diagnostics Inc. to its customers for their sole use.

Hitachi Chemical Diagnostics Inc. retains all rights, title, interest in and copyrights to the materials and information herein. The materials and information contained herein constitute confidential information of Hitachi Chemical Diagnostics Inc. and customer shall not disclose or transfer any of these materials or information to any third party.

Copyright © 2010  
Hitachi Chemical Diagnostics, Inc.  
630 Clyde Court  
Mountain View, California 94043

---

U.S. and Foreign Patents Pending  
All rights reserved. No part of this book may be reproduced in any form without  
written permission from Hitachi Chemical Diagnostics, Inc.

Document Number: 0781 – ENG Revision: 03  
Date: April 2010

## - Table of Contents -


	<b>Page</b>
1 Operation Key.....	3
2 Screen Display and Operation Method	
2-1 Initialization.....	4
2-2 Main Menu.....	5
2-3 Panel Type Selection.....	6
2-4 Auto-Run (Process 1 to 7).....	7
2-5 Auto-Run (Photoreagent Setup and Process 8).....	9
2-6 Auto-Run (Process End).....	10
2-7 Maintenance.....	11
2-8 Pause.....	13
2-9 Start/End Process and Position Setup.....	16
2-10 Alarm.....	17
2-11 Language Selection.....	21
3 Flowchart.....	22

# 1 Operation Key


Display:  
Liquid Crystal Panel

Operation Key:  
Only the touch panel key in the shaded field is executable. Press the Operation Key to execute the function. See Figure 1.

Numerical Value Input Key:  
Numerical value can be registered by "ENT" key. If the value entered is out of the defined range, a beep alarm will sound three times. "ESC" key is used for returning to the original value. See Figure 2.

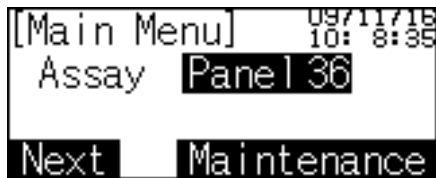

(Figure 1)

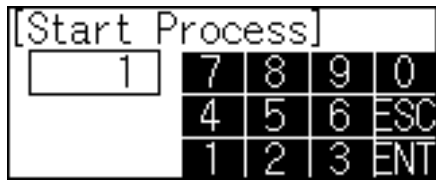

(Figure 2)

## 2 Screen Display and Operation Method

### 2-1 Initialization

#### [Screen Display]



AP 7208 09/11/18  
10:08:30  
PANEL 09,04,17 V1.30  
AP720 09,04,24 V1.40

(Figure 3)



[In Process]  
Initializing  
Mechanism  
Pause

(Figure 4)

#### [Summary]

Figure 3 will display approximately 5 seconds after the power is turned on. Then the screen will change automatically to the initialization screen, Figure 4. After the completion of initialization, there is a beep sound and Main Menu screen, Figure 5 will display.

#### [Operation Key]

(Figure 4)

Pause:

To Figure 27 Pause screen


## 2 Screen Display and Operation Method

### 2-2 Main Menu

#### [Screen Display]



(Figure 5)

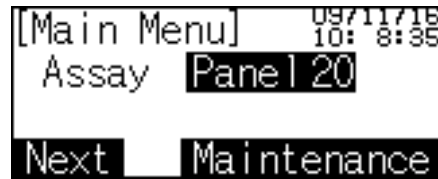

(Figure 6)

#### [Summary]

Figure 5 is the Main Menu screen after completion of Figure 4. Panel 36 is the default panel.

Figure 6 is the Main Menu screen after selecting Panel 20 in Figure 7.

#### [Operation Key]

Panel 36: To Figure 7 Panel Type Selection screen

Next: To Figure 8 Auto-Run screen

Maintenance: To Figure 19 Maintenance screen

## 2 Screen Display and Operation Method

### 2-3 Panel Type Selection

#### [Screen Display]



(Figure 7)

#### [Summary]

Select 36-allergen or 20-allergen panel in Figure 7.

#### [Operation Key]

36: To Figure 5 Main Menu screen

20: To Figure 6 Main Menu screen

## 2 Screen Display and Operation Method

### 2-4 Auto-Run (Process 1 to Process 7)

#### [Screen Display]

```
[Check] [Panel 36]
Antibody, [Back]
Wash Buffer,
Water,Waste [Start]
```

(Figure 8)

```
[In Process]
Now Priming
0: 0:33 [Pause]
```

(Figure 9)

```
[In Process]
Rack & PETs check
[Pause]
```

(Figure 10)

```
[In Process]
Rack & PETs OK!
Last PET# 20
[Pause]
```

(Figure 11)

```
[In Process]
Process# 1
Pette# 1
4:34:44 [Pause]
```

(Figure 12)

```
[In Process]
Process# 3
Incubation 1:55:03
4:12:41
```

(Figure 13)

```
[Now Incubating]
Please close door.
```

(Figure 14)

(Continued on next page)



(Auto-Run, cont.)

**[Summary]**

Figure 8 is a confirmation screen. The Operator needs to check that the Wash Buffer Bottle, Deionized Water Bottle, and Antibody Reservoir are filled, and that the Waste Bottle is emptied prior to the Auto-Run. Press “Start” key. The following screens will be displayed in order and Auto-Run will be executed:

- Figure 9 displays the priming is in process.
- Figure 10 displays the Rack and Pette setup is being checked.
- Figure 11 displays the Rack and Pette setup is confirmed.
- Figure 12 displays the washing process (Process 1, 4 or 7) or aspiration process (Process 2 or 5) is in operation. See Chapter 6, Operation, in the AP 720S Instruction Manual.
- Figure 13 shows incubation process (Process 3 or 6) is in operation.
- Figure 14 is a warning screen during incubation. It indicates the door is open with a beep sound. After the door is closed, the screen will return to Figure 13. In the case the door is open during the operation, i.e. initialization, priming, rack & Pettes check, washing, aspirating, rinsing and draining, the screen will switch to Pause (see section 2-8 Pause)

**[Operation Key]**

(Figure 8)

Start: To Figure 9 Priming screen  
Back: To Figure 5 Main Menu screen

(Figure 9)

Pause: To Figure 28 Pause screen

(Figure 10)

Pause: To: Figure 29 Pause screen

(Figure 11)

Pause: To: Figure 29 Pause screen

(Figure 12)

Pause: To: Figure 30 Pause screen

## 2 Screen Display and Operation Method

### 2-5 Auto-Run (Photoreagent Setup and Process 8)

#### [Screen Display]




[Change Photo Rgt]  
Elapsed Time 0: 0:15  
Alarm Off Continue

(Figure 15)



[Check]  
Add Photo Rgt?  
Yes No

(Figure 16)

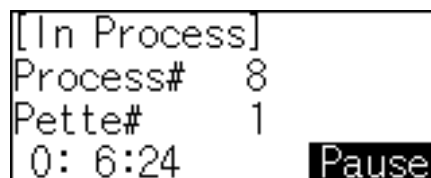

[In Process]  
Process# 8  
Pette# 1  
0: 6:24 Pause

(Figure 17)

#### [Summary]

Figure 15 will alarm the Operator that Photoreagent is needed. The display shows the elapsed time from the start of auto-pause. "Alarm Off" key will stop the alarm. "Continue" key will shift the screen to Figure 16.

Figure 16 requests confirmation of Photoreagent setup. "No" key will return to the previous screen. "Yes" key will shift the screen to Figure 17 and continue Auto-Run. Please note that before pressing "Yes" key, the Operator needs to fill the Photoreagent Reservoir with Photoreagent mixture and load into the Sample/Reagent Rack. See instructions in AP 720S Instruction Manual.

#### [Operation Key]

(Figure 15)

Alarm Off: Stop beep sound  
Continue: To Figure 16 screen

(Figure 16)

Yes: To Figure 17 screen  
No: To Figure 15 screen


(Figure 17)

Pause: To Figure 30 Pause screen

## 2 Screen Display and Operation Method

### 2-6 Auto-Run (Process End)

#### [Screen Display]

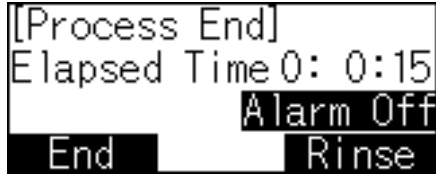

(Figure 18)

#### [Summary]

Figure 18 will alarm the Operator of the completion of Auto-Run. The display shows the elapsed time from the completion of Auto-Run. "Alarm Off" key will stop the alarm. "End" key will return to the Main Menu screen, Figure 5. "Rinse" key will shift the screen to Figure 22.

#### [Operation Key]

(Figure 18)

Alarm Off:	Stop beep sound
End:	To Figure 5 Main Menu screen
Rinse:	To Figure 22 screen

## 2 Screen Display and Operation Method

### 2-7 Maintenance

#### [Screen Display]

```

[Maintenance] Back
Prime Rinse
Language Clock
  
```

(Figure 19)

```

[Prime]
Check Wash, Water,
& Waste Bottles.
Back Ok
  
```

(Figure 20)

```

[In Process]
Now Priming
0: 0:33 Pause
  
```

(Figure 21)

```

[Rinse]
Please change tube
to Water Bottle.
Back Ok
  
```

(Figure 22)

```

[In Process]
Now Rinsing
0: 0:33 Pause
  
```

(Figure 23)

```

[Drain]
Please pull out tube
from Water Bottle.
End Ok
  
```

(Figure 24)

```

[In Process]
Now Draining
0: 0:33 Pause
  
```

(Figure 25)

```

[Clock set] Set Back
year 2009 hour 10
month 11 minute 8
day 16 second 32
  
```

(Figure 26)

(Continued on next page)

(Maintenance, cont.)

**[Summary]**

Figure 19 provides the Prime, Rinse, Clock and Language functions.

**[Operation Key]**

(Figure 19)

- Prime: To Figure 20 Prime Operation screen
- Rinse: To Figure 22 Rinse Operation screen
- Clock: To Figure 26 Time Setup screen
- Language: To Figure 43 Language Selection screen
- Back: To Figure 5 Main Menu screen

(Figure 20)

Prior to Prime Operation, the Operator needs to set the Wash Buffer tube into the Wash Buffer Bottle, the water tube into the Deionized Water Bottle, & empty the Waste Bottle. "Ok" key will start priming operation.

Ok: To Figure 21 Priming Operation screen

Back: To Figure 19 Maintenance screen

(Figure 22)

Prior to Rinse Operation, the Operator needs to set the Wash Buffer tube and the water tube into the Deionized Water Bottle. "Ok" key will start rinsing operation.

Ok: To Figure 23 Rinse Operation screen

Back: To Figure 19 Maintenance screen

(Figure 24)

Prior to Drain Operation, the Operator needs to pull out the tubes from the Wash Buffer Bottle and the Deionized Water Bottle. "Ok" key will start draining operation.

Ok: To Figure 25 Drain Operation screen

End: To Figure 19 Maintenance screen

(Figure 26)

Internal clock of the machine can be set in this screen.

*Year:* Figure 2 numerical value input screen with title [#Years]

*Month:* Figure 2 numerical value input screen with title [#Months]

*Day:* Figure 2 numerical value input screen with title [#Days]

*Hour:* Figure 2 numerical value input screen with title [#Hours]

*Minute:* Figure 2 numerical value input screen with title [#Minutes]

*Second:* Figure 2 numerical value input screen with title [#Seconds]

*Set:* Clock is set, return to Figure 19 Maintenance screen

*Back:* Clock is not set, return to Figure 19 Maintenance screen

## 2 Screen Display and Operation Method

### 2-8 Pause

#### [Screen Display]

```
[Run Status]Continue
Elapsed Time 0: 0:33
Initializing
Alarm Off  Cancel
```

(Figure 27)

```
[Run Status]Continue
Elapsed Time 0: 0:33
Priming
Alarm Off  Cancel
```

(Figure 28)

```
[Run Status]Continue
Elapsed Time 0: 0:33
Rack & PETs check
Alarm Off  Cancel
```

(Figure 29)

```
[Run Status]Continue
Elapsed Time 0: 0:33
Proc# 2 Pette# 12
Alarm Off  Cancel
```

(Figure 30)

```
[Run Status]Continue
Elapsed Time 0: 0:33
Rinsing
Alarm Off  Cancel
```

(Figure 31)

```
[Run Status]Continue
Elapsed Time 0: 0:33
Draining
Alarm Off  Cancel
```

(Figure 32)

```
[Run Status]Continue
Information= D.Open
Elapsed Time 0: 0:48
Alarm Off  Cancel
```

(Figure 33)

```
[Check]
Cancel Process &
Return to Main Menu?
Yes  No
```

(Figure 34)

(Continued on next page)

(Pause, cont.)

### [Summary]

Figure 27 to Figure 33 the alarm will indicate that the current operation is paused. The screen will display the [Run Status] including the time elapsed from the start of the pause. A message "Information=" may be displayed in the screen, Figure 33. See [Supplement] below for details.

"Continue" key will shift the screen to the original status, and resume the operation. For example, in Figure 30 Process was paused at Pette #12 and the operation will resume on Pette #12. "Cancel" key will shift the screen to Figure 34. "No" key will return to the previous screen. "Yes" key will forward to Figure 3.

### [Operation Key]

(Figure 27) to (Figure 33)

Alarm Off:	Stop beep sound
Continue:	Return to the original screen and operation is resumed
Cancel:	To Figure 34

(Figure 34)

Yes:	To Figure 3
No:	To previous screen

### [Supplement]

At the time of operation failure, the instrument will automatically pause and various warning message will be displayed on the screen. Even though operation can resume, if causes of failure remain, the instrument will pause again. Please call Service Representative for additional assistance.

The following are examples of alarm messages:

- Example) "**Information=D. Open**"  
"D. Open" indicates that the door is open after the start of run operation. Press "Continue" key after the door is closed.
- Example) "**Information =C1 L**"  
"C1 L" indicates failure from both sides of head part of carrier drive or sensor failure. After you confirm the status, press "Continue" key and check the status.
- Example) "**Information =C1 H**"  
"C1 H" indicates failure from both sides of head part of carrier drive or sensor failure. After you confirm the status, press "Continue" key and check the status.

(Continued on next page)

*(Examples of alarm messages, cont.)*


- Example) **“Information =C2 L”**  
“C2 L” indicates failure from the head part of top/bottom carrier drive or sensor failure. After you confirm the status, press “Continue” key and check the status.
- Example) **“Information =C2 H”**  
“C2 H” indicates failure from the head part of top/bottom carrier drive or sensor failure. After you confirm the status, press “Continue” key and check the status.
- Example) **“Information =C3 L”**  
“C3 L” indicates failure of PET rack rotation carrier drive or sensor failure. After you confirm the status, press “Continue” key and check the status.
- Example) **“Information =C3 H”**  
“C3 H” indicates failure of PET rack rotation carrier drive or sensor failure. After you confirm the status, press “Continue” key and check the status.
- Example) **“Information =C4 L”**  
“C4 L” indicates failure of reagent rack rotation carrier drive or sensor failure. After you confirm the status, press “Continue” key and check the status.
- Example) **“Information =C4 H”**  
“C4 H” indicates failure of reagent rack rotation carrier drive or sensor failure. After you confirm the status, press “Continue” key and check the status.
- Example) **“Information =C5 L”**  
“C5 L” indicates failure of aspiration syringe drive or sensor failure. After you confirm the status, press “Continue” key and check the status.
- Example) **“Information =C5 H”**  
“C5 H” indicates failure of aspiration syringe drive or sensor failure. After you confirm the status, press “Continue” key and check the status.
- Example) **“Information =C6 L”**  
“C6 L” indicates failure of wash syringe drive or sensor failure. After you confirm the status, press “Continue” key and check the status.
- Example) **“Information =C6 H”**  
“C6 H” indicates failure of wash syringe drive or sensor failure. After you confirm the status, press “Continue” key and check the status.



## 2 Screen Display and Operation Method

### 2-9 Start/End Process and Position Setup

#### [Screen Display]

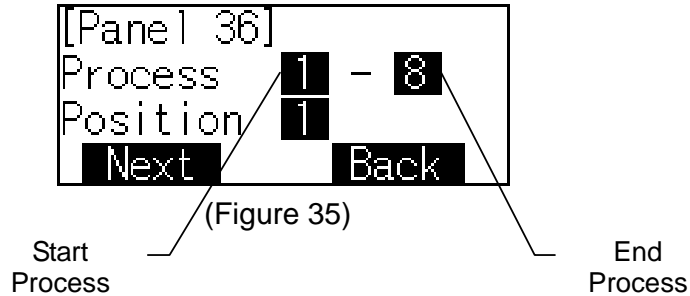

#### [Summary]

Figure 35 will appear when power interruption occurs during Auto-Run or the current process is cancelled/paused during Auto-Run.

Before re-starting the Auto-Run, the Operator needs to setup the START PROCESS NO., END PROCESS NO. and PETTE POSITION NO. according to the status at the interruption of Auto-Run so that the operation will be continued without missing steps.

Start Process: Range 1-8 (a smaller number than End Process)  
 End Process: Range 1-8 (a greater number than Start Process)  
 Position: Pette start position, range 1-20

#### [Operation Key]

(Figure 35)

- |                     |  |
|---------------------|--|
| Start Process key:  | To Figure 2 numerical value input screen with the title [Start Process]  |
| End Process key:    | To Figure 2 numerical value input screen with the title [End Process]    |
| Start Position key: | To Figure 2 numerical value input screen with the title [Start Position] |
| Next:               | To Figure 8 Auto-Run screen  |
| Back:               | To Figure 5 Main Menu screen   |

## 2 Screen Display and Operation Method

### 2-10 Alarm

#### [Summary]

The alarm screen will appear when a problem occurs during the Auto-Run. The alarm will sound and can be stopped by pressing the “Alarm Off” key.

There are two kinds of alarm screens. The first alarm screen is for confirmation. The Operator will confirm the failure or error displayed on the screen. Press “Ok” key to proceed to the next process. The second alarm screen requires action. The Operator needs to make a proper correction according to the screen display, and then make the selection to “Retry” or “End” the process.

Figure 36 - Alarm screen of power interruption (confirmation)

Figure 37 - Alarm screen of data initialization (confirmation)

Figure 38 - Alarm screen of no Sample/Reagent Rack (selection)

Figure 39 - Alarm screen of no Pettes (selection)

Figure 40 - Alarm screen of wrong Pette setup (selection)

Figure 41 - Alarm screen of wrong start Pette setup (selection)

#### Figure 36 - Alarm Screen of Power Interruption (Confirmation)

#### [Screen Display]



```
[Power failure]
Happened 2009/1/19 9:15:23
Date now 2009/1/19 9:15:38
Elapsed Time 0: 0:15
Alarm Off  Ok
```


(Figure 36)

#### [Summary]

If there is a power failure during the Auto-Run, the control software will detect the power interruption after the power has returned and Figure 36 will appear. The elapsed time from the start of power interruption will be displayed. Press ‘Ok’ key to continue the process.

### Figure 37 - Alarm Screen of Data Initialization (Confirmation)

#### [Screen Display]

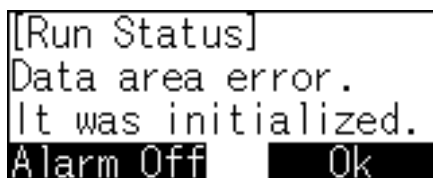

[Run Status]  
Data area error.  
It was initialized.  
Alarm Off      Ok


(Figure 37)

#### [Summary]

Figure 37 shows data error has occurred after initialization. The Operator needs to press "Ok" so that the data for the instrument will be recovered and the default values will be implemented. Re-entry of program and internal parameters may be required. If this is the case, please contact your Service Representative.

### Figure 38 - Alarm Screen of No Sample/Reagent Rack

#### [Screen Display]

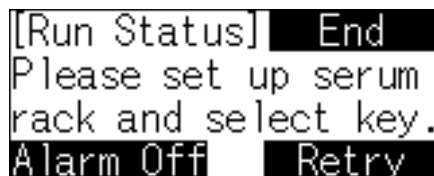

[Run Status]      End  
Please set up serum  
rack and select key.  
Alarm Off      Retry

(Figure 38)

#### [Summary]

If the control software detects that there is no Sample/Reagent Rack at the start of the run, Figure 38 will appear. If the run needs to be continued, setup the Sample/Reagent Rack, and press "Retry" to continue. If the run needs to be cancelled, press "End" key to end the Auto-Run.

### Figure 39 - Alarm Screen of No Pettes

#### [Screen Display]

```
[Run Status] End
Please set up PETs
and select key.
Alarm Off Retry
```

(Figure 39)

#### [Summary]

If the control software detects that there is no Pette at the start of the run, Figure 39 will appear. If the run needs to be continued, setup Pettes in the Pette Rack, and press "Retry" key to continue. If the run needs to be cancelled, press "End" key to end the Auto-Run.

### Figure 40 - Alarm Screen of Wrong Pette Setup

#### [Screen Display]

```
[Run Status] End
Empty PET position.
End# 10 Error# 12
Alarm Off Retry
```

(Figure 40)

#### [Summary]

If the control software detects that the Pette setup is wrong at the start of the run, Figure 40 will appear. If the run needs to be continued, setup Pettes correctly and press "Retry" key to continue. If the run needs to be cancelled, press "End" key to end the Auto-Run.

Figure 40 shows that the last Pette is detected at position #10, and a wrong Pette setup is detected at position #12. This is because no Pette is detected at position #11.

When "End # 0" is shown, Pette is not detected at position #1.

## Figure 41 - Alarm Screen of Wrong Start Pette Setup

### [Screen Display]



```
[Run Status] End
PET entry error.
Start# 6 End# 4
Alarm Off Retry
```

(Figure 41)

### [Summary]

If the control software detects that the position of the start Pette is wrong at the start of the run, Figure 41 will appear. If the run needs to be continued, setup the Pettes correctly, press 'Retry' key to continue. If the run needs to be cancelled, press 'End' key to end the Auto-Run.

Figure 41 shows that the Pettes are loaded from position #1 to #4. However, the Operator entered position #6 for the Pette start position (refer to section 2-9).

## Figure 42 - Alarm Screen of Communication Error

### [Screen Display]



```
AP 720S 80/1/10:0:0
```

(Figure 42)

### [Summary]

After the power is turned on, Figure 42 will appear if the control software cannot communicate with the panel operation. The version information and current date/time will not be displayed in the screen as Figure 3 shows. The date/time display will count up from 80/1/10:0:0.

**When this alarm screen occurs, normal machine function is not possible. Please contact your Service Representative.**

## 2 Screen Display and Operation Method

### 2-11 Language Selection

#### [Screen Display]



(Figure 43)

#### [Summary]

Figure 43 will appear after selecting “Language” key in Figure 19 Maintenance screen.

#### [Operation Key]

(Figure 43)

English: Select the screen displays in English

Japanese: Select the screen displays in Japanese

Spanish: Select the screen displays in Spanish

German: Select the screen displays in German

Italian: Select the screen displays in Italian

French: Select the screen displays in French

Back: To Figure 19 Maintenance

# AP 720S™ Panel Flowchart

## Maintenance

## Auto-Run

## Pause

